
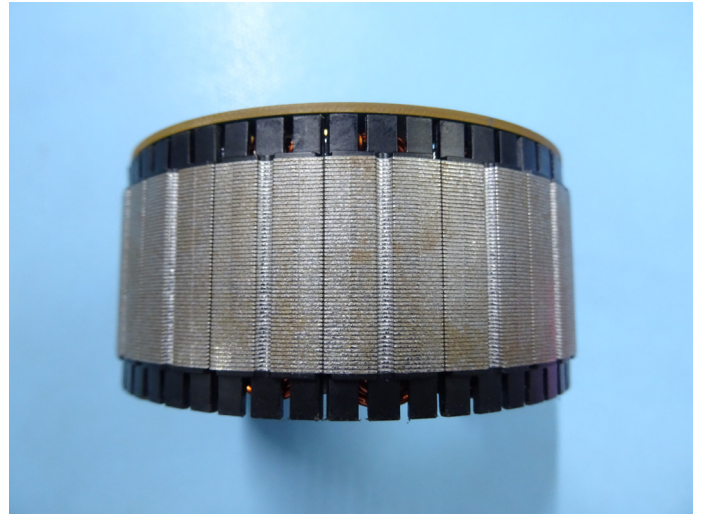


Product information ILM-E

Dear ILM-E user,

To ensure optimum product performance, we use particularly high-grade materials in our products. In addition, we avoid negatively influencing factors. For this reason, the exposed sides of the stator poles are deliberately not protected against corrosion.

As a result, oxidation may occur on the exposed surfaces of the stator poles in the ILM-E product series. Slight corrosion, as shown in the examples below, does not constitute a product defect and does not impair the function of the stator.

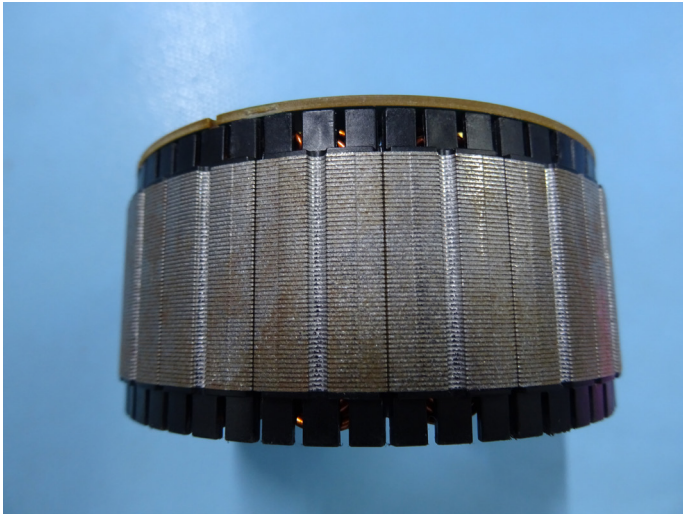

Information on cleaning the stators before installation can be found in the integration instructions for the respective product. We recommend cleaning with isopropanol in accordance with the installation instructions as described in section 5.1.2.

To minimize surface corrosion, we recommend wearing gloves and storing the rotor-stator kits in rooms with low humidity.